

NEO C-Metro

Product Specifications



E3031H1 EBGS
E3031H2 EBGS



E3032H1 EWWW
E3032H2 EWWW



E3033H1 EBGS
E3033H2 EBGS



E3034H1 EWWW
E3034H2 EWWW



E3031HBP GS



E3031V1 EWWW
E3031V2 EWWW



E3032V1 EBGS
E3032V2 EBGS



E3033V1 EWWW
E3033V2 EWWW



E3031VBP GS



E3031V1 FGGS
E3031V2 FGGS



E3032V1 FWWW
E3032V2 FWWW



E3033V1 FGGS
E3033V2 FGGS



E3031HD EWWW



E3031HD EBGS



E3032HD EWWW



E3032HD EBGS



E3031HD20 EWWW



E3031HD20 EBGS



E3031VD20 EWWW



E3031VD20 EBGS



E3031DR45 WW



E3031DR45 EBGS



ET3727V WW



E3426 GS



E3015 WW



E3015D EBGS



ET3015DR45 EBGS



ET3426 WW



ET3025 GS



ET3025D EWWW



E3030FSG WW



E3030FSG GS



E3031DFSG EWWW



E3031DFSG GS



ET3030X GS



E3030X WW



E3031TB GS



E3031TV GS



E3032TV WW



E3032TVFM/2 GS
E3032TVFM/1 GS



ET3031RJ WW



ET3032RJ GS



E3031RJ5E WW



E3032TD GS



E3426/10IS GS



E3031EKTH WW



E3032HDM GS



E3030VDM WW



E3031VBPD GS



E3031VBPM WW



E3031VBPD GS

Product Number	Product Description	Colour and Indicator Options #					
		EWWW	FWWW	WW	EBGS	FGGS	GS
Flush Switches							
E3031H1	1 Gang 1 Way Horizontal Dolly Switch	•	•		•		
E3031H2	1 Gang 2 Way Horizontal Dolly Switch	•	•		•		
E3032H1	2 Gang 1 Way Horizontal Dolly Switch	•	•		•		
E3032H2	2 Gang 2 Way Horizontal Dolly Switch	•	•		•		
E3033H1	3 Gang 1 Way Horizontal Dolly Switch	•	•		•		
E3033H2	3 Gang 2 Way Horizontal Dolly Switch	•	•		•		
E3034H1	4 Gang 1 Way Horizontal Dolly Switch	•	•		•		
E3034H2	4 Gang 2 Way Horizontal Dolly Switch	•	•		•		
E3031HBP	4A 1 Way Horizontal Bell Push Switch			•			•
E3031V1	1 Gang 1 Way Vertical Dolly Switch	•	•		•	•	
E3031V2	1 Gang 2 Way Vertical Dolly Switch	•	•		•	•	
E3032V1	2 Gang 1 Way Vertical Dolly Switch	•	•		•	•	
E3032V2	2 Gang 2 Way Vertical Dolly Switch	•	•		•	•	
E3033V1	3 Gang 1 Way Vertical Dolly Switch	•	•		•	•	
E3033V2	3 Gang 2 Way Vertical Dolly Switch	•	•		•	•	
E3031VBP	4A 1 Way Vertical Bell Push Switch			•			•
Dimming Switches							
E3031HD	600W 1 Gang Horizontal Dimming Switch	•			•		
E3032HD	400W 2 Gang Horizontal Dimming Switch	•			•		
Double Pole Switches							
E3031HD20	20A Horizontal Dolly Double Pole Switch	•			•		
E3031VD20	20A Vertical Dolly Double Pole Switch	•			•		
E3031DR32	32A Double Pole Switch	•		•	•		•
E3031DR45	45A Double Pole Switch	•		•	•		•
Flush Socket Outlets							
E3426	13A 3 Pin Socket Outlet			•			•
E3015	13A 3 Pin Switched Socket Outlet			•			•
E3015D	13A 3 Pin Switched Socket Outlet with LED	•			•		
ET3426	13A Twin 3 Pin Socket Outlet			•			•
ET3025	13A Twin 3 Pin Switched Socket Outlet			•			•
ET3025D	13A Twin 3 Pin Switched Socket Outlet with LED	•			•		
ET3015DR45	45A Double Pole Switch and 13A Switched Socket Outlet with Neon	•			•		
ET3727V	Shaver Unit 115/240V			•			•
Fused Connection Units							
E3030FSG	13A Fused Connection Unit	•		•	•		•
E3031DFSG	13A Fused Connection Unit with Double Pole Switch	•		•	•		•
Connection Units & Flush Plates							
E3031TB	25A Connection Unit			•			•
E3030X	1 Gang Blank Plate			•			•
ET3030X	2 Gang Blank Plate			•			•
Telecommunication Accessories							
E3031TV	1 Gang TV Socket Outlet			•			•
E3032VTV	2 Gang Vertical TV Socket Outlet			•			•
E3032TVFM/2	75ohm TV-FM Socket Outlets with 2 Cord Grips, Master			•			•
E3032TVFM/1	75ohm TV-FM Socket Outlets with 2 Cord Grips, Slave			•			•
E3031RJ	1 Gang RJ11 4 Pin Telephone Outlet			•			•
E3032RJ	2 Gang RJ11 4 Pin Telephone Outlet			•			•
E3031RJ5E	1 Gang RJ45 8 Pin Data Outlet			•			•
E3032TD	Dual Telecommunication Outlets (Tel. RJ11 + Data RJ45)			•			•
Hotel Accessories							
E3031EKTH	Electronic Key Card Switch with Indicator			•			•
E3032HDM	10AX “Do Not Disturb” & “Please Clean Up” Control Switch with Illuminated Symbols			•			•
E3030VDM	Illuminated “Do Not Disturb” & “Please Clean Up” Symbols			•			•
E3031VBPD	4A Bell Push Switch with Illuminated “Do Not Disturb” Symbol			•			•
E3031VBPM	4A Bell Push Switch with Illuminated “Please Clean Up” Symbol			•			•
E3031VBPDM	4A Bell Push Switch with Illuminated “Do Not Disturb” & “Please Clean Up” Symbols			•			•
E3426/1OIS	TruGlobal Socket (only available in selected countries)			•			•
#	EWWW	White Switch with White LED	FWWW	White Switch with White Fluorescent Indicator	WW	White	
	EBGS	Grey Silver Switch with Blue LED	FGGS	Grey Silver Switch with Green Fluorescent Indicator	GS	Grey Silver	